 


ES Gatillo Interno **DE** Interner Klinkezug
IT Gancia Sgancia Interno **PT** Gatilho Interno **FR** Tire Plaque Interne

MX



IMPORTANT!


Installation Guidelines

The diagram illustrates the adjustment of the 1st opening in three steps:

- Step 1:** Initial state. A red box highlights the adjustment mechanism.
- Step 2:** Adjustment of the 1st opening to 12mm. A red box highlights the adjustment mechanism. A dimension line indicates the "Adjustable 1st Opening" with a value of 12.
- Step 3:** Final state. A red box highlights the adjustment mechanism. A dimension line indicates the "2nd Free Opening".

Red arrows indicate the direction of adjustment between the steps.

IMPORTANT

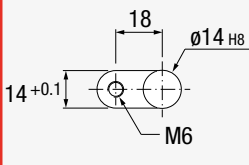

IMPORTANT

