

LAMINAR GAS VENT


ES Salida de Gases Laminar DE Laminargasventil

IT Uscita dei Gas Laminare PT Postiço de Ventilação Laminar FR Eventation Laminaire

● Cad Insertion Point




LV

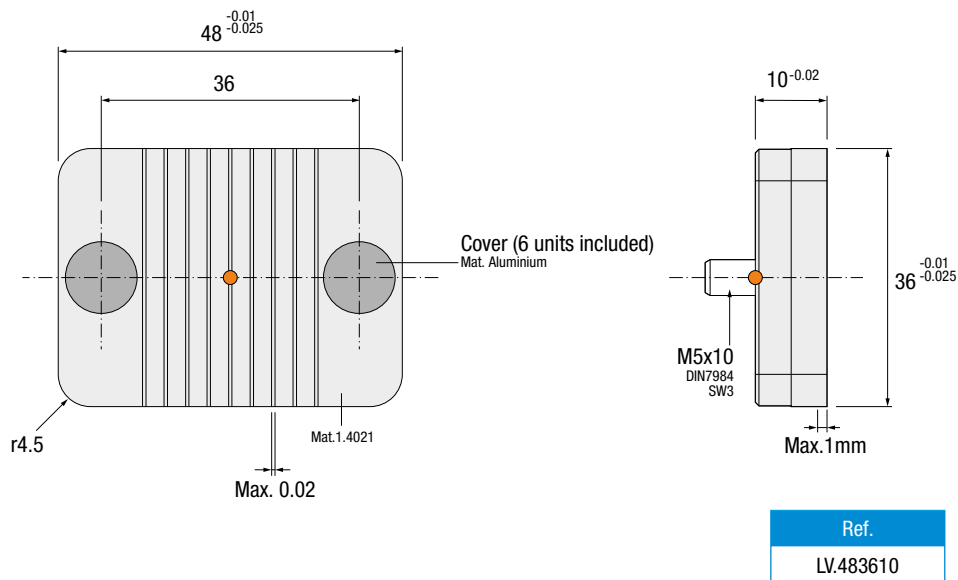


Max.
150°C

Installation Guidelines

Consejos de Instalación · Richtlinien zur Installation · Consigli di Installazione · Instruções de Instalação · Mode d'Installation

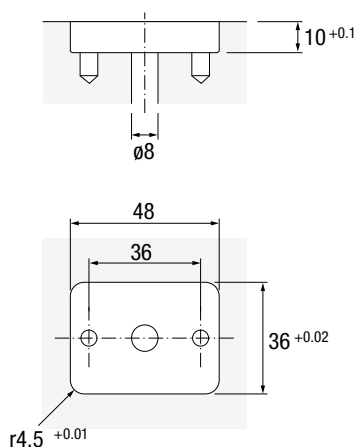

IMPORTANT !

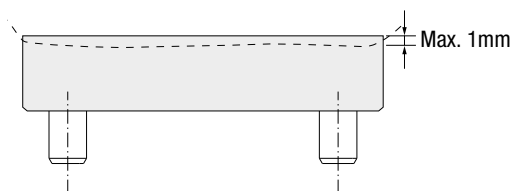

The LV can only be machined by using EDM.
El LV sólo se puede mecanizar usando electroerosión.
Das LV kann nur mit Hilfe von EDM bearbeitet werden.
L'LV può essere lavorato solo tramite elettroerosione.
Para maquinar o LV, utilizar apenas EDM (erosão).
Le LV ne peut être usiné qu'en utilisant l'électroérosion.

