

SPRUE BUSHING HARDENED

ES Casquillo de expulsión de colada templado DE Gehärtete Angussbuchse


IT Boccola di espulsione temprata per canale di colata PT Casquilho canal temperado FR Douille canal trempé




EC

● Cad Insertion Point

 
SERIE 51110

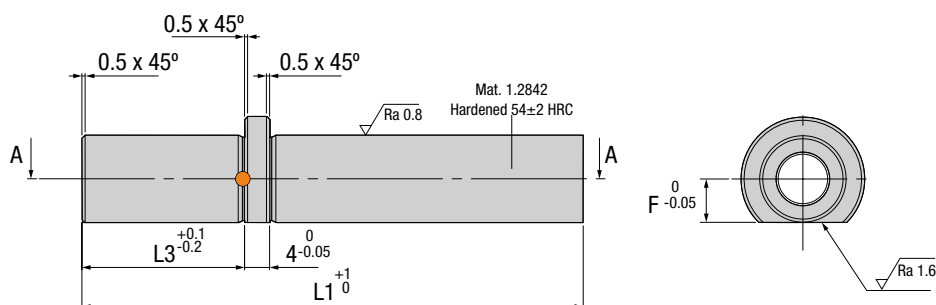

STANDARD

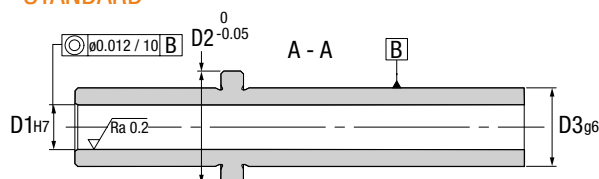 

CONICAL

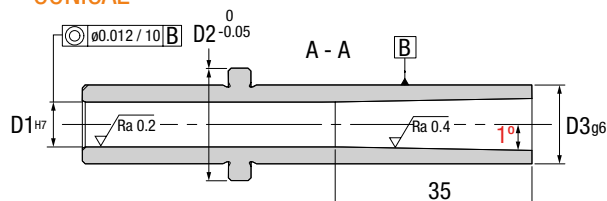 


STANDARD	CONICAL	D2	F	L3	D3	L1	D1
S51110-20-12-60-6	CS51110-20-12-60-6	16	6	20	12	60	6
S51110-26-14-xxx-8	CS51110-26-14-xxx-8	20	7	26	14	80	8
S51110-26-16-xxx-10	CS51110-26-16-xxx-10	22	8	26	16	80	10
S51110-50-14-120-8	CS51110-50-14-120-8	20	7	50	14	120	8
S51110-50-16-120-10	CS51110-50-16-120-10	22	8	50	16	120	10


! IMPORTANT

Replace the **xxx** in the reference with the L1 dimension.
Sustituir la **xxx** de la referencia por la cota L1.
Ersetzen Sie bei der Referenz das **xxx** durch die gewünschte L1 Dimension.
Sostituite la **xxx** del codice con la dimensione L1.
Substituir o **xxx** da referencia pela cota L1.
Remplacez la valeur **xxx** par la valeur L1.

 
SERIE 51011

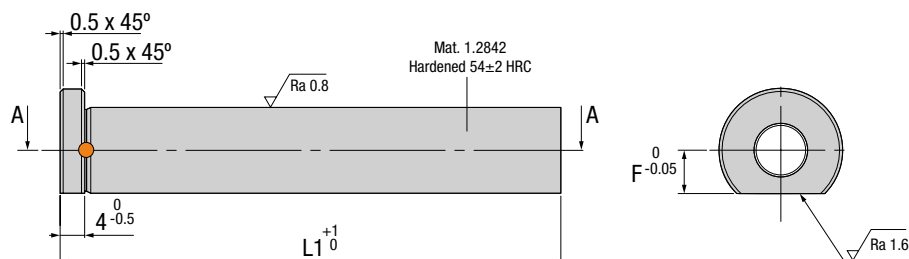

STANDARD

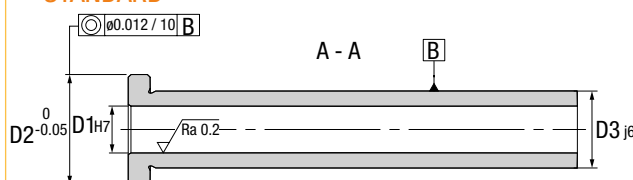 

CONICAL

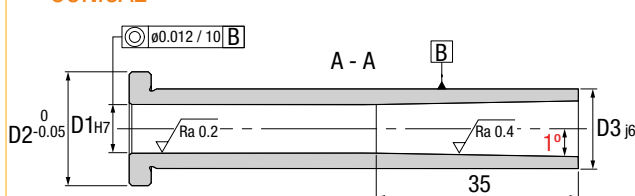 

STANDARD	CONICAL	D2	F	D3	L1	D1
S51011-10-80-6	CS51011-10-80-6	16	5	10	80	6
S51011-12-80-8	CS51011-12-80-8	18	6	12	80	8
S51011-14-xxx-8	CS51011-14-xxx-8	20	7	14	80	8
S51011-16-xxx-10	CS51011-16-xxx-10	22	8	16	80	10

! IMPORTANT

Replace the **xxx** in the reference with the L1 dimension.
Sustituir la **xxx** de la referencia por la cota L1.
Ersetzen Sie bei der Referenz das **xxx** durch die gewünschte L1 Dimension.
Sostituite la **xxx** del codice con la dimensione L1.
Substituir o **xxx** da referencia pela cota L1.
Remplacez la valeur **xxx** par la valeur L1.