 
 


EC


SERIE 51110

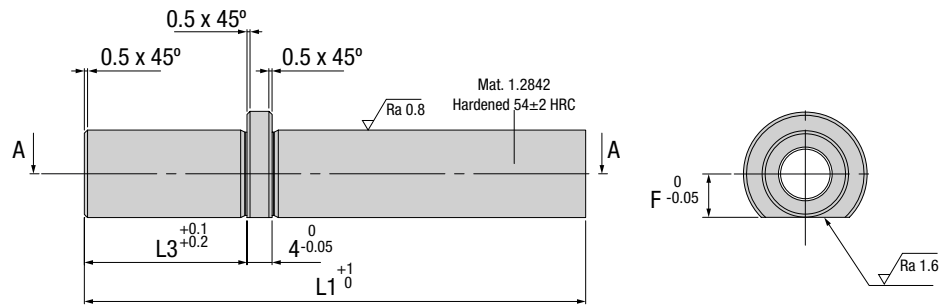

STANDARD

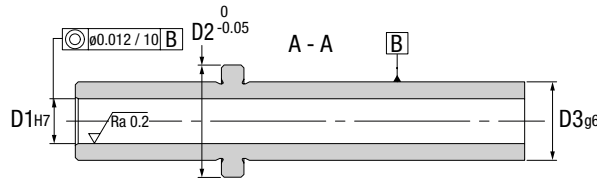

 CONICAL

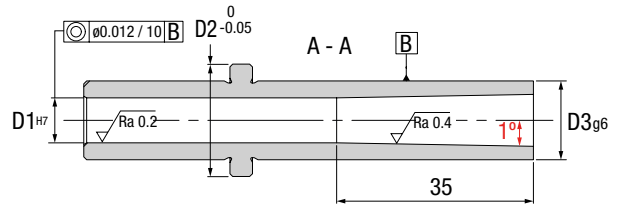


STANDARD	CONICAL	D2	F	L3	D3	L1	D1
S51110-20-12-60-6	CS51110-20-12-60-6	16	6	20	12	60	6
S51110-26-14-xxx-8	CS51110-26-14-xxx-8	20	7	26	14	80	100
S51110-26-16-xxx-10	CS51110-26-16-xxx-10	22	8	26	16	80	100
S51110-50-14-120-8	CS51110-50-14-120-8	20	7	50	14	120	8
S51110-50-16-120-10	CS51110-50-16-120-10	22	8	50	16	120	10


IMPORTANT

Replace the **xxx** in the reference with the L1 dimension.
Sostituire la **xxx** de la referencia por la cota L1.
Ersetzen Sie bei der Referenz das **xxx** durch die gewünschte L1 Dimension.
Sostituire la **xxx** del codice con la dimensione L1.
Substituir o **xxx** da referencia pela cota L1.
Remplacez la valeur **xxx** par la valeur L1.

 
SERIE 51011

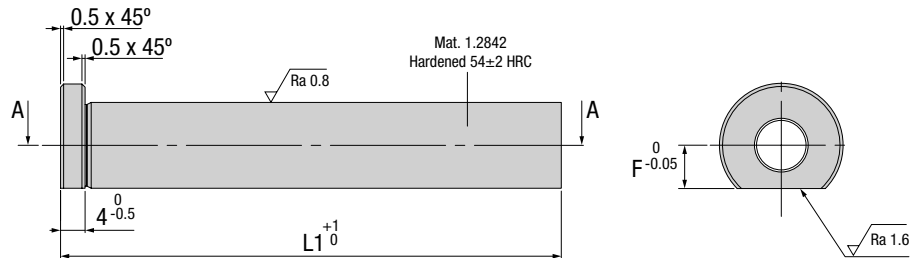

STANDARD

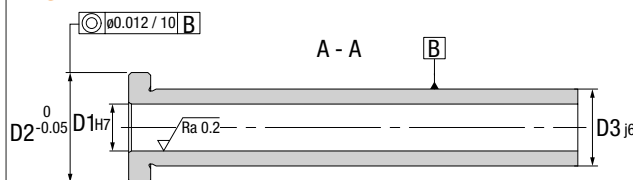 

CONICAL

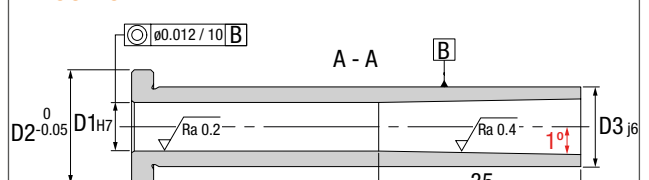 

STANDARD	CONICAL	D2	F	D3	L1	D1
S51011-10-80-6	CS51011-10-80-6	16	5	10	80	6
S51011-12-80-8	CS51011-12-80-8	18	6	12	80	8
S51011-14-xxx-8	CS51011-14-xxx-8	20	7	14	80	100
S51011-16-xxx-10	CS51011-16-xxx-10	22	8	16	80	100

IMPORTANT

Replace the **xxx** in the reference with the L1 dimension.
Sostituire la **xxx** de la referencia por la cota L1.
Ersetzen Sie bei der Referenz das **xxx** durch die gewünschte L1 Dimension.
Sostituire la **xxx** del codice con la dimensione L1.
Substituir o **xxx** da referencia pela cota L1.
Remplacez la valeur **xxx** par la valeur L1.