





SLIDE RETAINER

ES Retenedor Corredera DE Schiebersicherung
IT Retensore Carrello PT Retensor de Corrediças FR Blocage de Coulisseau

● Cad Insertion Point



RCM

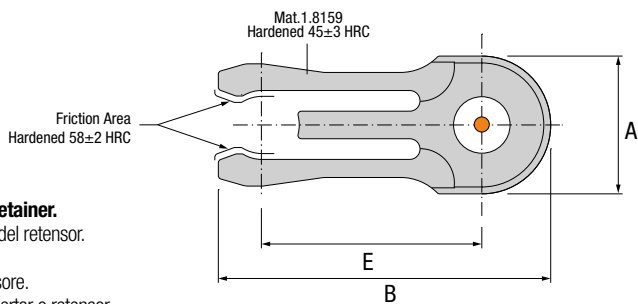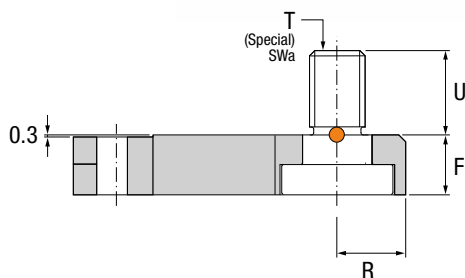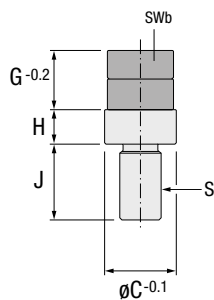

EN RF=Force to release the retainer.

ES RF=Fuerza de desenganche del retensor.

DE RF=Kraft zum entriegeln.

IT RF=Forza di sgancio del ritenore.


PT RF=Força necessária para libertar o retensor.

FR RF=Force de libération de la retenue.


Ref.	A	B	C	E	F	G	H	J	RF (N)	N	R	S	T	U	SWa	SWb
RCM.163808	16	38	8	25	7.6	7.6	4	10	100	7	8	M5	M6	9	4	2.5
RCM.204810	20	48	10	32	8.7	8.6	5	11	140	8	10	M6	M8	12	5	3
RCM.245712	24	57	12	37.5	9.6	9.6	6	12	180	9	12	M8	M10	15	6	4

Installation Guidelines

Consejos de Instalación · Richtlinien zur Installation · Consigli di Installazione · Instruções de Instalação · Mode d'Installation

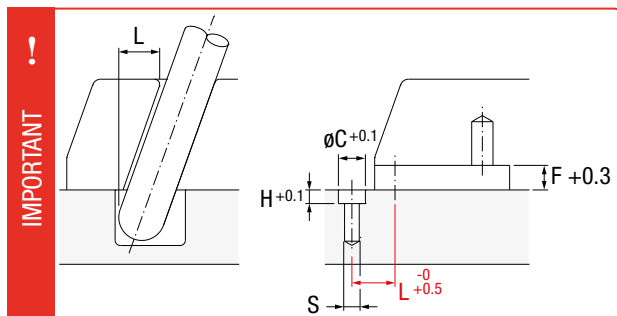

Slide Disassembling

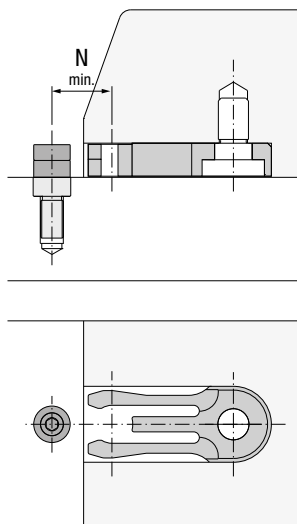

Mold Open

